


Update MyCNC Profile

Updating the profile from within myCNC software


Current myCNC profile configuration can be stored, restored or updated from our Server.

A profile Store/Restore features available in “Support” widget

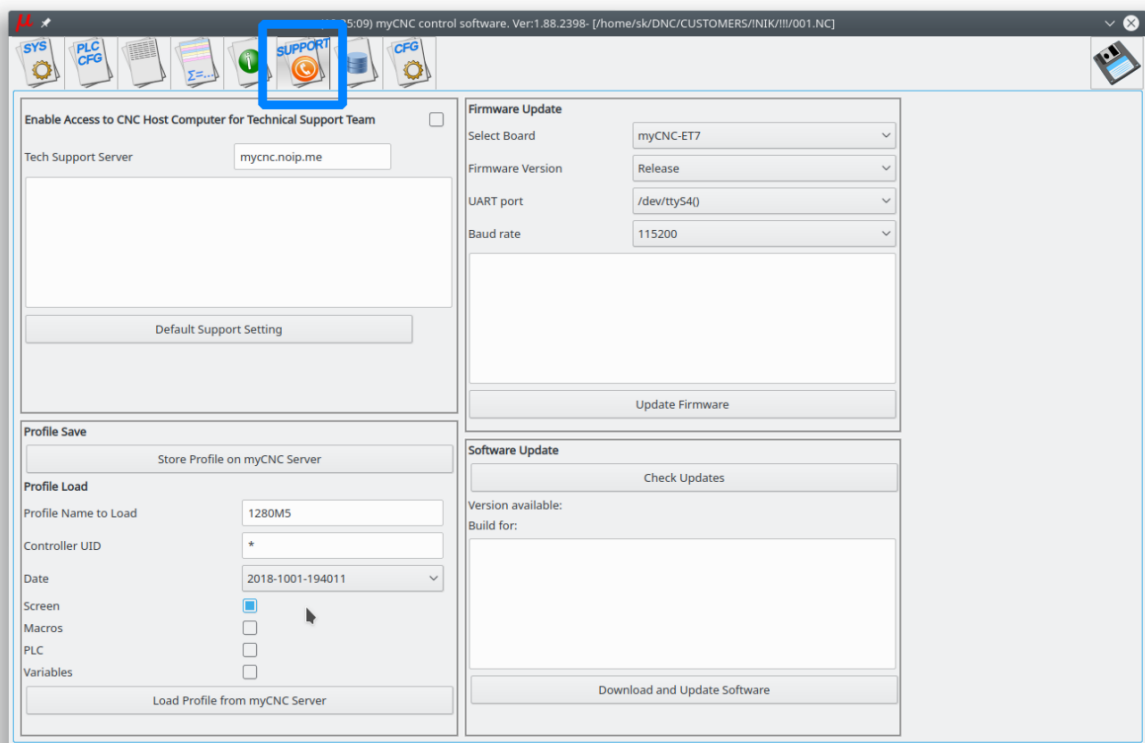


Store profile on myCNC server

To Store profile on myCNC Server press a button “Store Profile on myCNC Server” Confirmation dialog will be shown after the profile uploading complete.

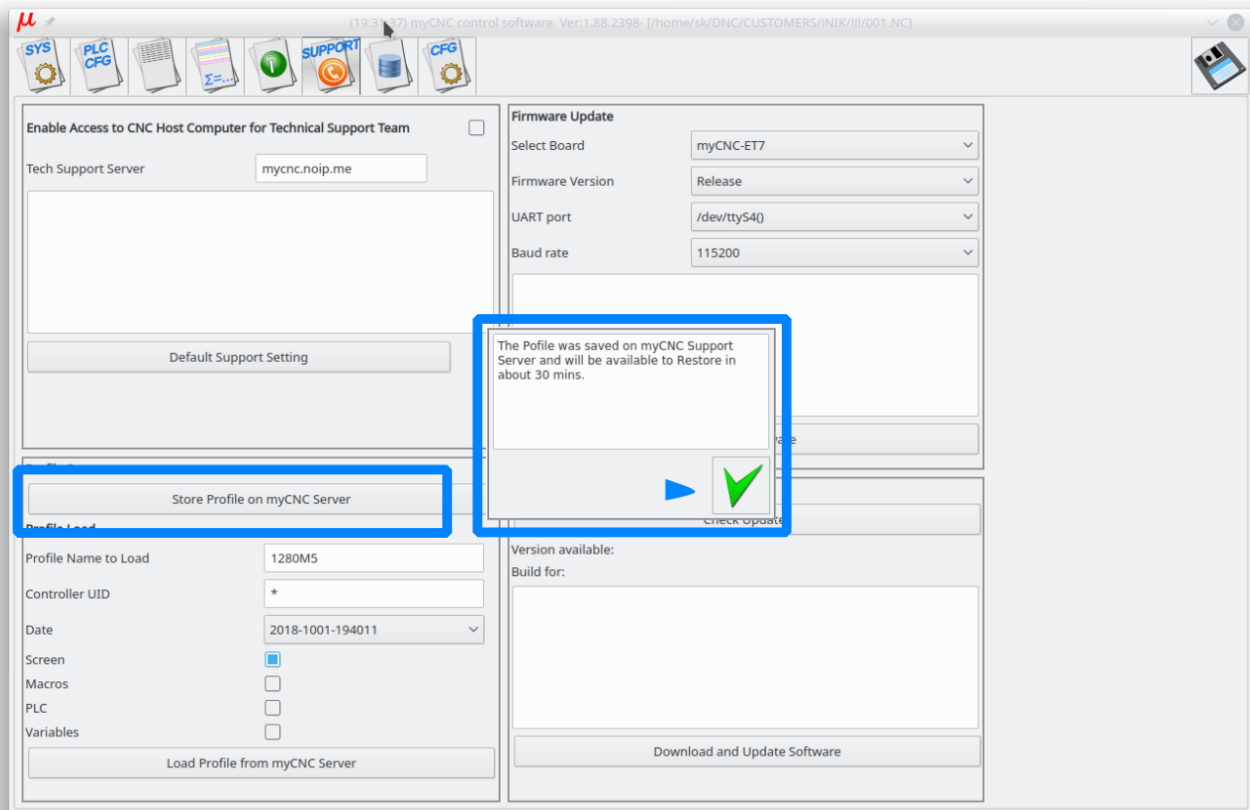


Update profile on myCNC server

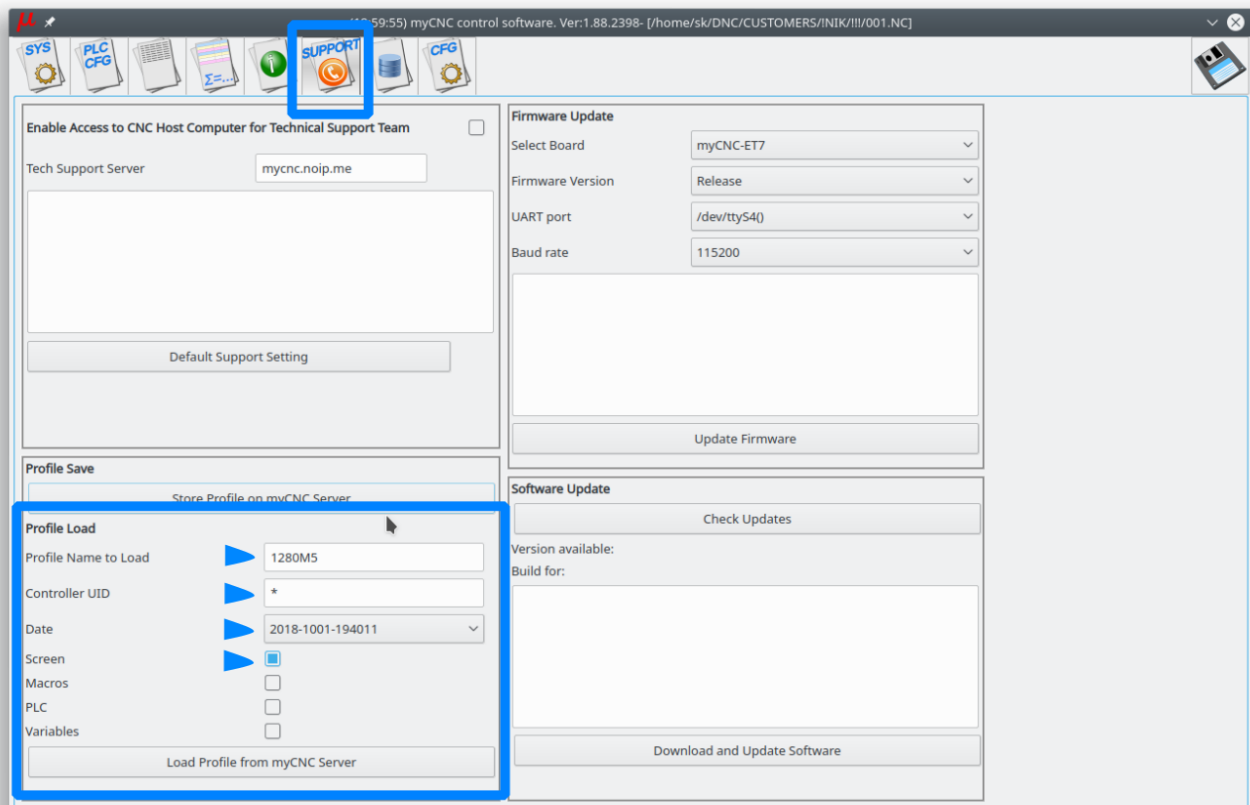

To update the profile from our Server


- Put "*" to "Controller UID" input line. In this case "Factory default" profiles will be filtered
- Select the last date in "Date" Combobox
- Select components you want to update
 - "Screen" selection makes sense since it will be the last screen we prepared for this profile
 - "Macros" & "PLC" components are completely up to you. Most likely you did some changes in macros and PLC while the machine setup. In this case you need to keep your files and don't update macros/PLC. You may use macros/PLC update if your machine setup is in progress and you need to rollback to Factory defaults.
 - Variables - Never update the cnc-variables.xml file because it contains all your machine settings like "pulse per mm", motor outputs configuration, input-output assignments etc.
- Press "Load Profile from myCNC Server" button"
- Confirmation dialog will appear. Please check and confirm update.

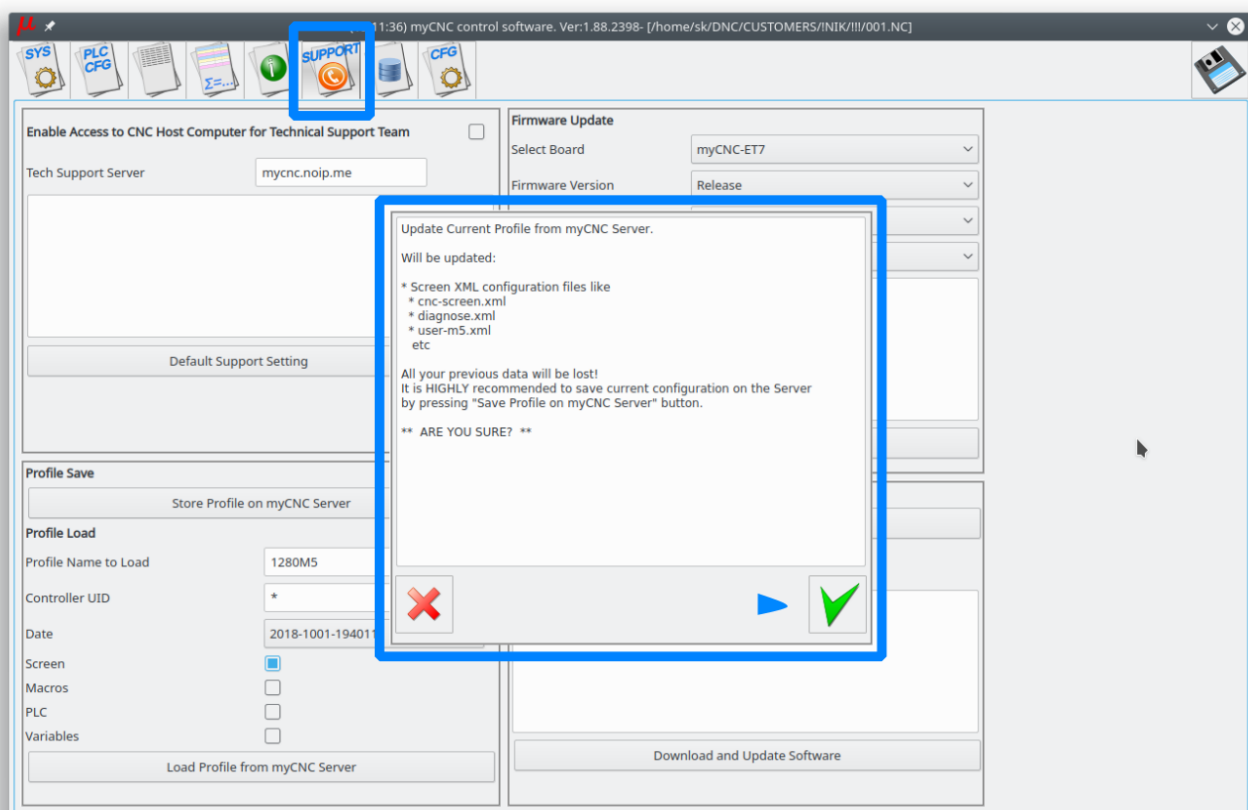


Manual profile update

In case there is no recently updated version of the profile you are looking for on the server, you can manually download it from the [main site](#). Please follow the instructions below to manually update your profile to the latest available version:

1. Go to the [main site's Download page](#) and scroll down to the **Profiles** section, then click on the profile you would like to update and select **Save**

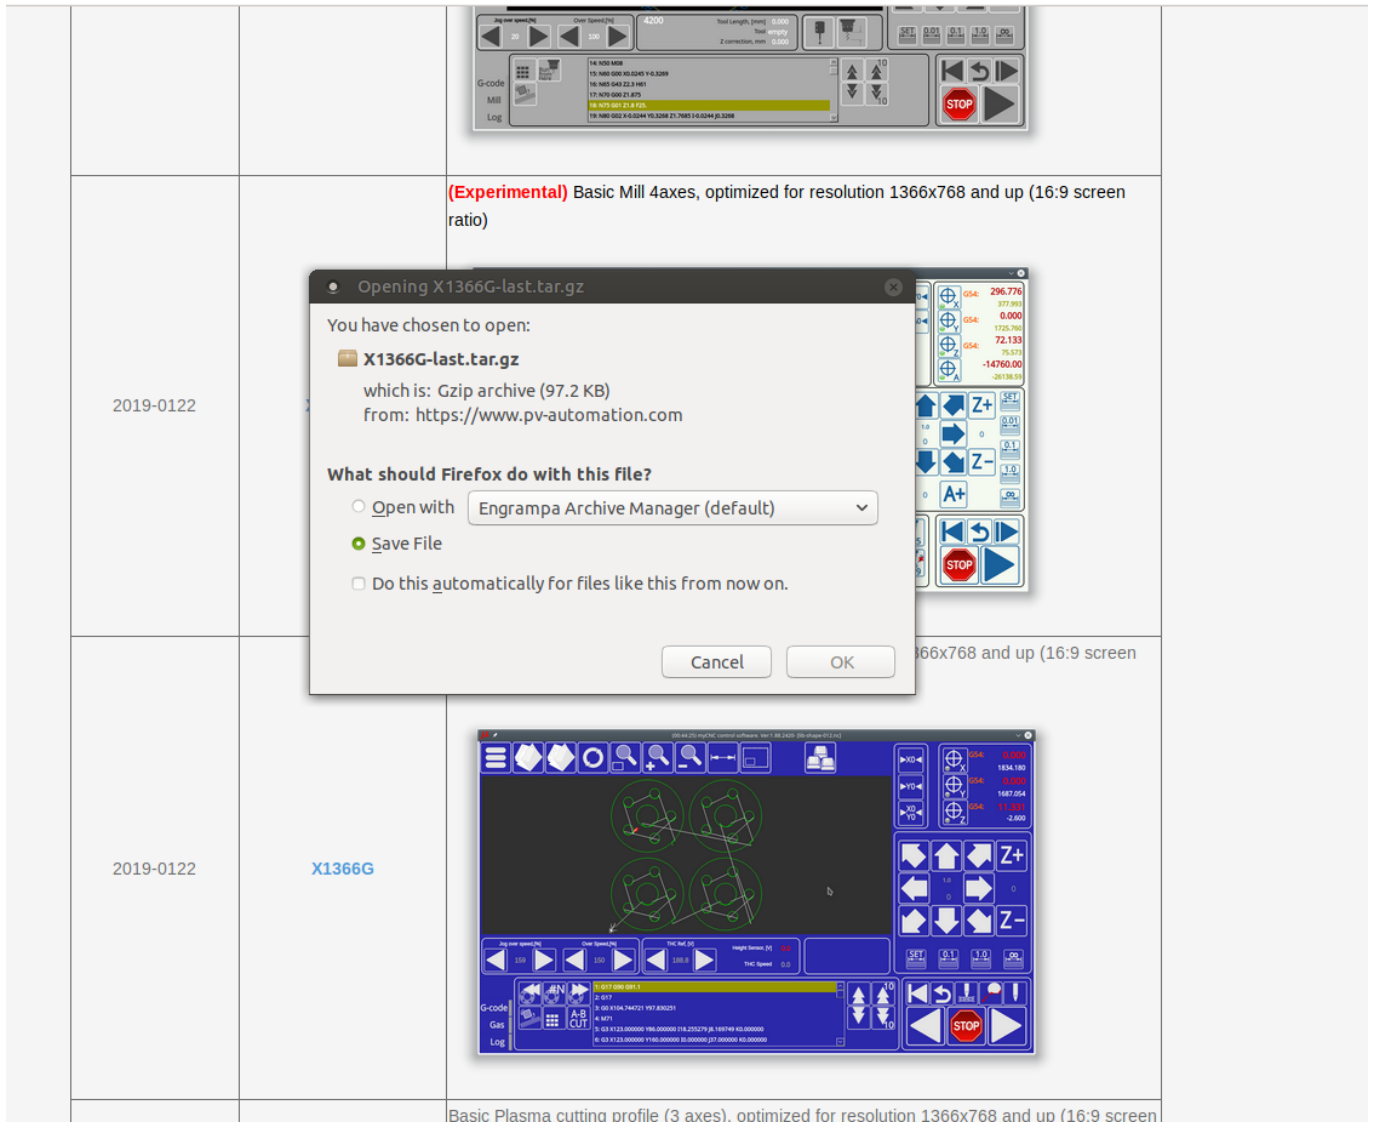


2. Copy the archive file that you have downloaded to home > .config > myCNC > profiles

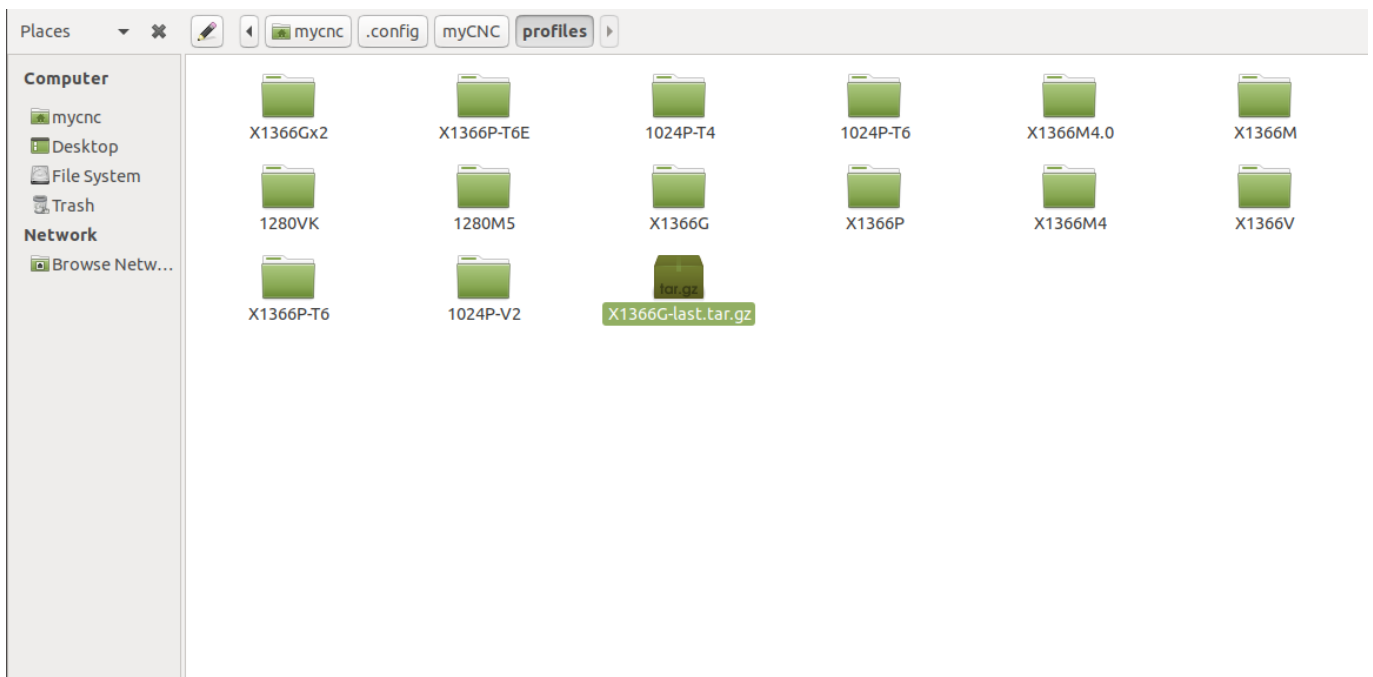


3. If you would like to keep your preferences from your previous profile, go to that profile's folder and

copy the **cnc-variables.xml** file over to your Desktop.

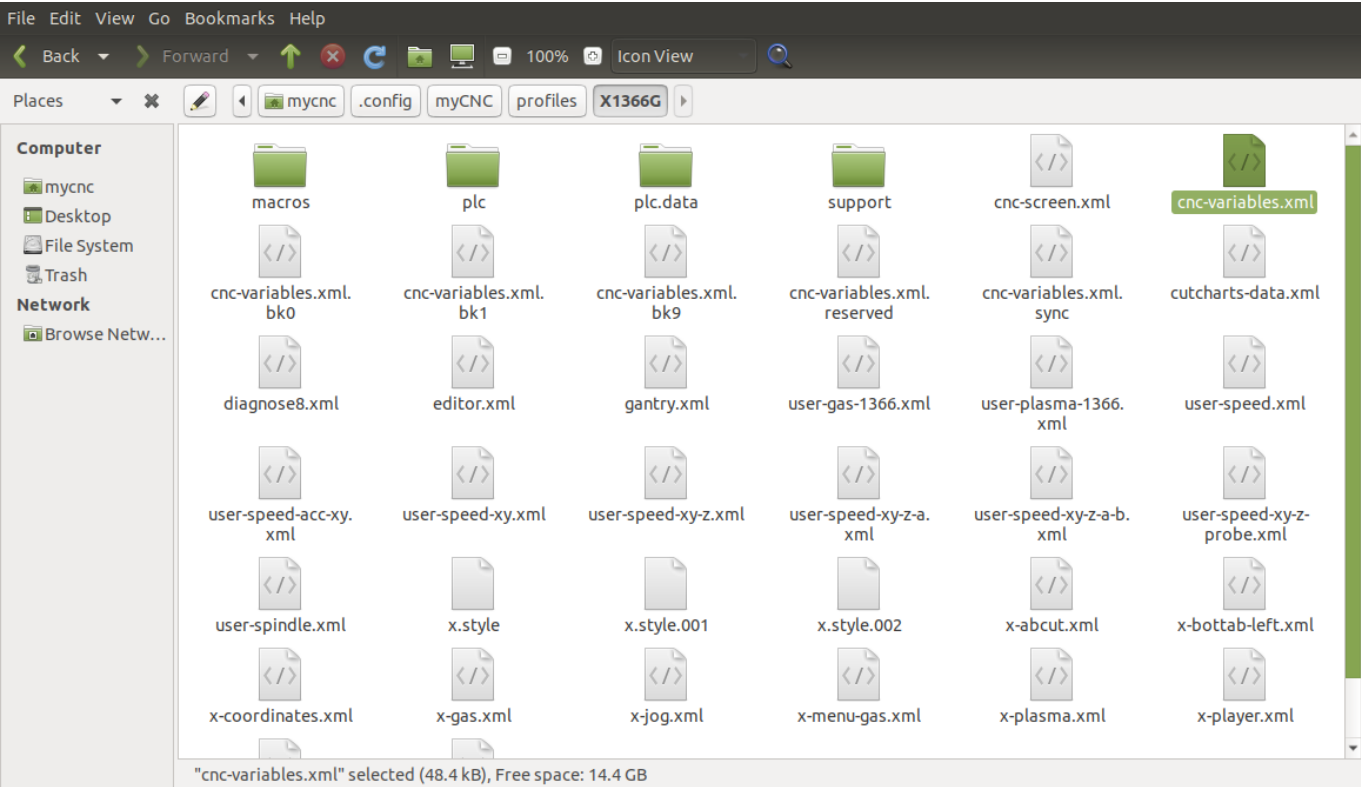

4. Extract the folder from the copied archive into the Profiles folder. If you want to add your previous settings from Step 3, replace the **cnc-variables.xml** file in your new profile folder with the one that you have copied to your desktop.

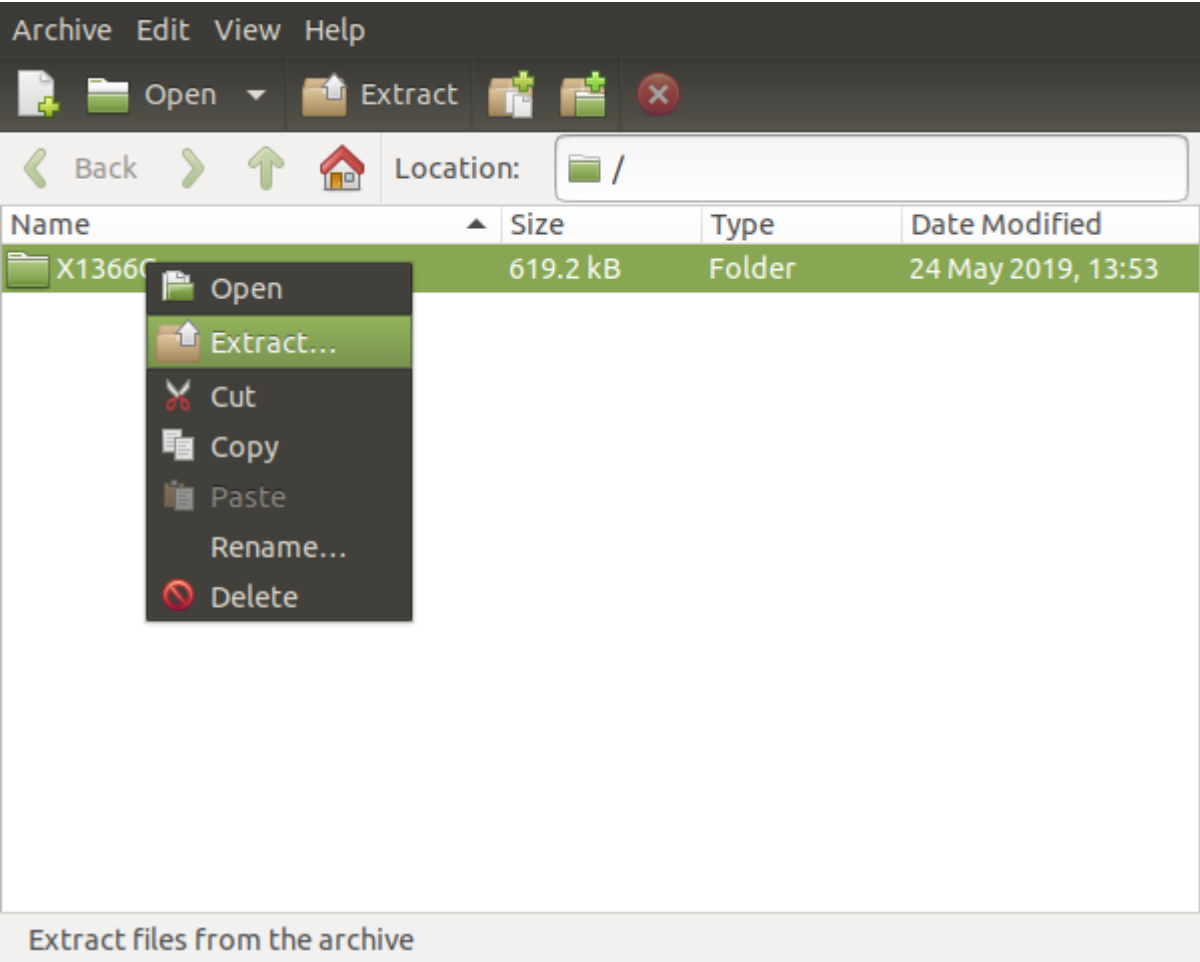

5. Relaunch myCNC software.

The manual profile update should now be complete.

From:

<http://docs.pv-automation.com/> - **myCNC Online Documentation**

Permanent link:

http://docs.pv-automation.com/mycnc/update_profile?rev=1558979704

Last update: **2019/05/27 13:55**

