

Troubleshooting

[Frequently Asked Questions section](#) - useful for initial setup

- [Hardware Troubleshooting Checklist](#)
- [No Connection between myCNC controller and a Host computer](#)
 - [Network Setup - General Setup Tips](#)
 - [How to change IP Address of myCNC control board - Linux](#)
 - [How to change IP address for an Ubuntu MATE Computer](#)
 - [How to change IP Address for TinkerBoard SBC](#)
 - [How to set up connection with a Windows computer](#)
- [How to change profile from Linux Desktop](#)
- [How to restore profiles](#)
- [How to rollback to a previous version of myCNC software](#)
- [THC Troubleshooting](#)
- [Camera Troubleshooting](#)
- [File System Checkup \(The software does not start\)](#)
- [Changing read-only system behaviour](#)

From:

<http://docs.pv-automation.com/> - **myCNC Online Documentation**

Permanent link:

<http://docs.pv-automation.com/troubleshooting/troubleshooting>

Last update: **2022/01/10 15:45**

