

# Linear encoder closed-loop setup

Read more about the topic in the [MyCNC closed loop configuration manual](#).

Linear encoders are typically used on higher-end machines to allow for a more precise monitoring of the difference between the real and the expected machine position (incremental change from the absolute position). This article focuses on the linear encoder setup and on the methods to make the information obtained from the encoders useful within the myCNC software.

The following window is available upon navigating to Settings > Config > Hardware > Encoders:

	#0	#1	#2	#3	#4	#5	#6	#7	#8	#9
Encoder Resolution	2500	2500	2500	2500	2500	2500	512	512	512	512
Current value	9999	9999	9999	0	0	0	0	0	0	0
Z position	0	0	0	0	0	0	0	0	0	0
Mul	0	0	0	0	0	0	0	0	0	0
/(2^Div)	1	1	1	1	1	1	1	1	1	1
Encoder Position	0	0	0	0	0	0	0	0	0	0
Position										
Linear Encoder Dimension	0.005	0.005	0.005	0.005	0.005	0.005	0.005	0.005		

The following settings are available:


- Encoder resolution for each particular encoder number.
- The current encoder value is displayed on this screen. This is the fastest way to check if the encoder is connected/working - for example, turning an MPG wheel handle should immediately change the current encoder value in this field for the selected encoder.
- Z-position
- Mul coefficients (multiplication value), and
- /(2^Div). These Mul and Div coefficients are used due to the fact that the controller cannot handle floating number data in calculations, therefore it is necessary to first multiply and then divide a number by certain coefficients. They are used to bring the value of the encoder in line with the pulses/unit value specified in the Axes/Motors tab. Larger numbers allow to reduce the error. For example, if the ratio between the Axes/Motors value and the encoder pulse/unit value is 3.5, then the multiplication value (Mul) can be set to 7, while Div can be set to 1 ( $2^1 = 2$ ,  $7/2 = 3.5$ ).
- Encoder position
- Position
- Linear encoder dimension. This should be set to the proper encoder dimension to convert the impulses from a linear encoder to mm (the most common values for this setting are 1 and 5

micrometers, as shown in the screenshot).

The following global variables deal with encoder values:

9000	(+16) Registers represent Encoder values. Writing to this registers does not affect anything. Selected channel Current Encoder value will be returned when reading these registers. Reading these registers from the controller Hardware PLC will return actual Encoder value. Encoder values in the software are updated about every 128ms. This delay should be counted when using Encoder values from the Software PLC. 9000 - Encoder #0 value 9001 - Encoder #1 value 9002 - Encoder #2 value 9003 - Encoder #3 value 9004 - Encoder #4 value 9005 - Encoder #5 value 9006 - Encoder #6 value 9007 - Encoder #7 value
9200	+16. Reserved to display the encoder position on an infinite scale (no value turnover on every full encoder turn, instead the value will keep climbing indefinitely into the positives/negatives depending on where the encoder handle is spun)
9216	+16. Reserved to display the encoder position on an infinite scale WITH the current encoder dimension (to indicate the current encoder position)

These global variables allow to display encoder values on the main screen of myCNC profiles that are geared towards encoder setups (such as 1366M4E and 1366PE):

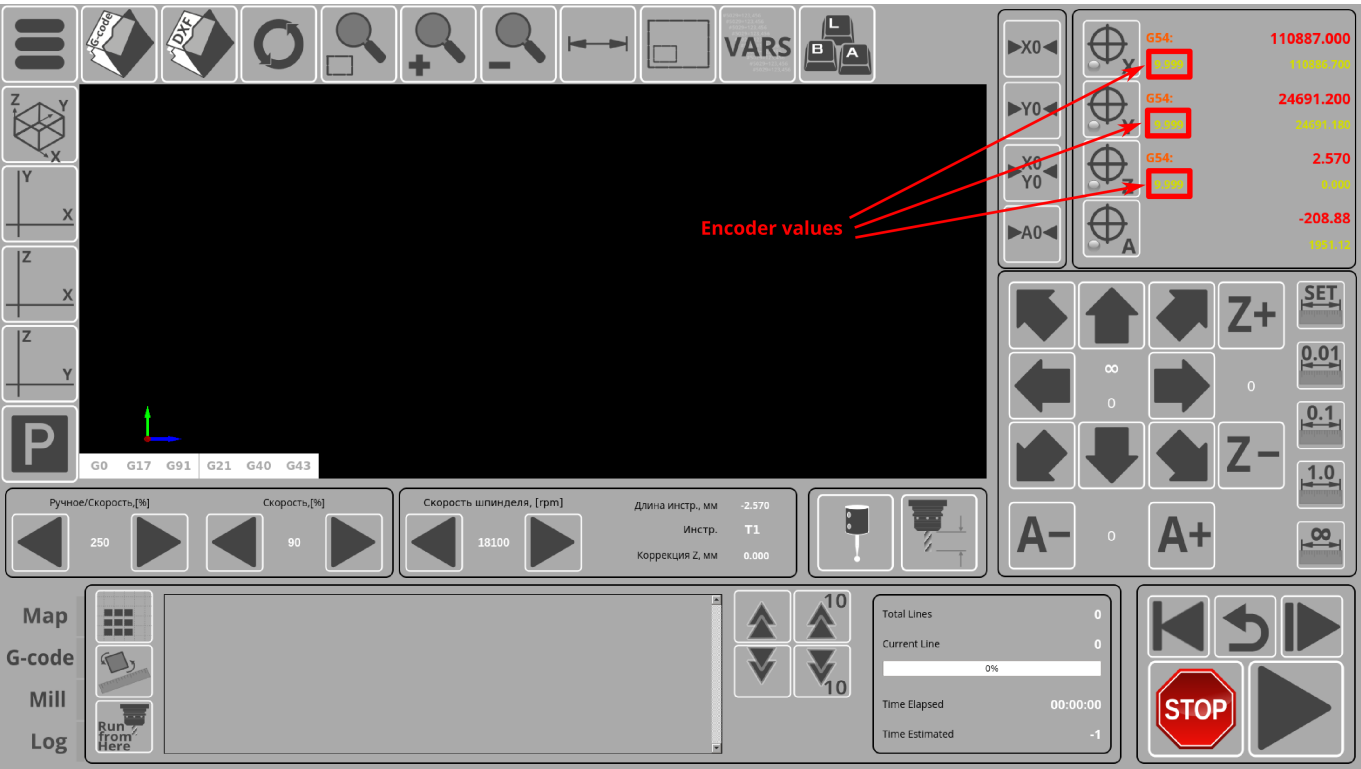

From:

<http://docs.pv-automation.com/> - **myCNC Online Documentation**

Permanent link:

[http://docs.pv-automation.com/mycnc/linear\\_encoder\\_setup?rev=1575569245](http://docs.pv-automation.com/mycnc/linear_encoder_setup?rev=1575569245)

Last update: **2019/12/05 13:07**

